


Changing the Keg:



Step 1. When the chamber is empty and the float has dropped disconnect empty keg and tap new keg

Step 2. Push vent button until chamber is full of clear beer

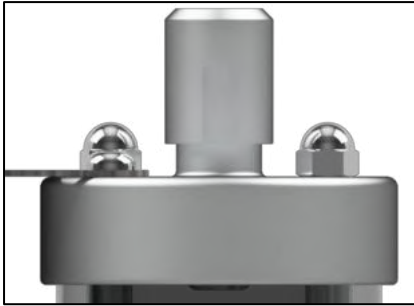

Step 3. Turn lever to clean position until float is unseated and it reaches the top of the chamber



Step 4. Turn lever to work position, you are now ready to pour beer

Cleaning the Beer Lines:



Step 1. Turn lever to clean position to prevent float from seating.

Clean beer lines as per brewery recommendations



Step 2. Once cleaning is complete and you are ready to reconnect beer, turn lever to work position and repeat Steps 1-4 as per "Changing the Keg"


SPARE PARTS KIT PART # 4100018

79646657	ORING	x4
79001129	ORING	x1
79700862	ORING	x4
79000181	ORING	x2


Features:

Chamber Volume: 235ml


Reversible Installation Orientation

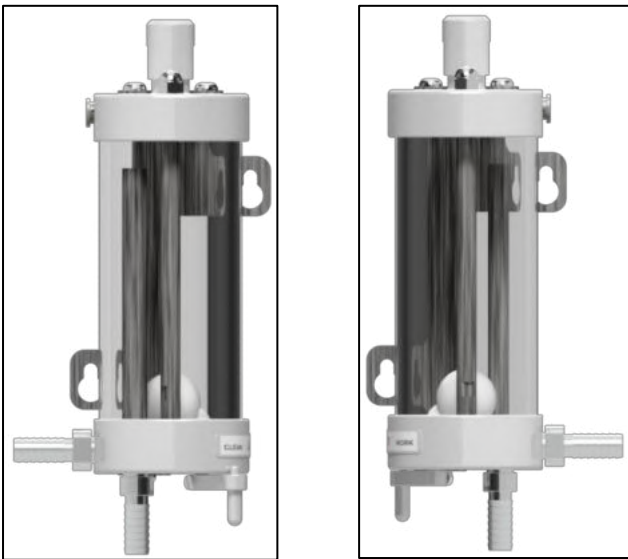


Reversible Vent Outlet Position

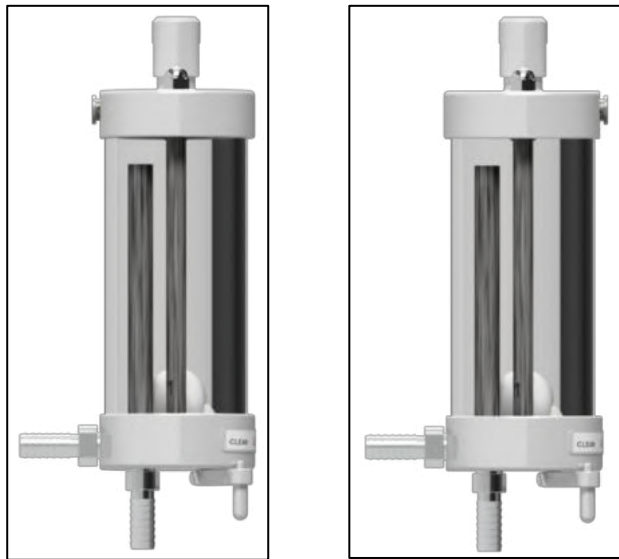


Multiple Inlet and Outlet Options

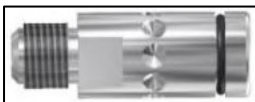


Fatlock Adaptor
Part #79646775

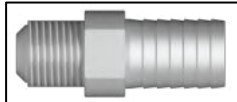

12mm Barb fitting
Part #79646785

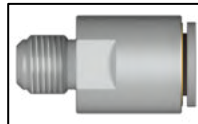


1/2 Inch John Guest
Part #79001131

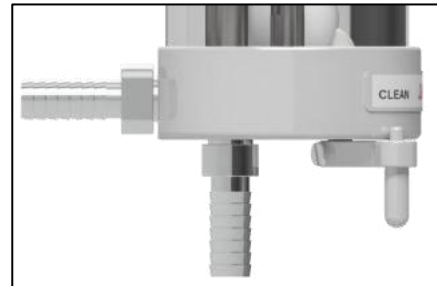


10mm Barb Fittings (Standard)

Installation

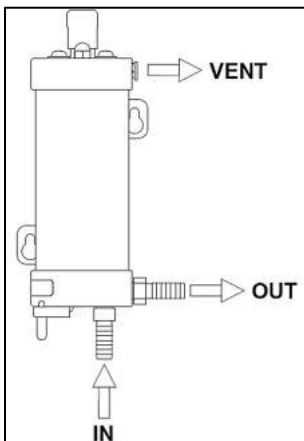

Always install FOB vertically as shown
Maximum operating pressure is 550 kPa

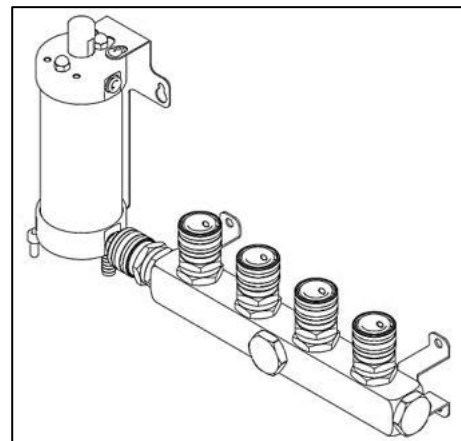

Manifold mount