


## HOSHIZAKI BEER TAP CARE INSTRUCTION SHEET

### 1. Beer Tap (Daily)

- 1.1. Unlock and lift the keg coupler handle all the way up.
- 1.2. Move the beer tap lever toward you to dispense beer remaining in the circuit.
- 1.3. Loosen the union nut of the beer tap by turning it clockwise and remove the beer tap (**Fig. 1**).
- 1.4. Tilt the beer tap lever toward you and run tap water through the beer tap.
- 1.5. Refit the beer tap by turning the union nut counterclockwise.
- 1.6. Push keg coupler lever down to re-tap keg.

Fig. 1

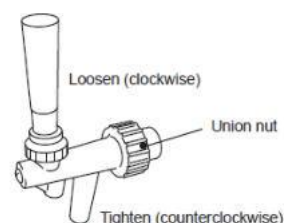

### 2. Disassembly and cleaning of Beer Tap (Weekly)

- 2.1. Unlock and lift the keg coupler handle all the way up.
- 2.2. Move the beer tap lever toward you to dispense beer remaining in the circuit.
- 2.3. Loosen the union nut of the beer tap by turning it clockwise and remove the beer tap.
- 2.4. Loosen the cap nut of the beer tap and remove the lever (**Fig. 2**).
- 2.5. Remove the valve shaft from the beer tap (**Fig. 3**).
- 2.6. Clean the beer tap and valve shaft by using a neutral dishwashing detergent and the accessory cleaning brush.
- 2.7. Use the accessory brush (S) to clean the two small holes in the beer tap (**Fig. 4**).
- 2.8. Rinse the beer tap thoroughly with clean water.
- 2.9. Assemble the beer tap properly by positioning the hole in the valve shaft (larger hold facing up) (**Fig. 5**).
- 2.10. Refit the beer tap by turning the union nut counterclockwise.
- 2.11. Push keg coupler lever down to re-tap keg.

Fig. 2

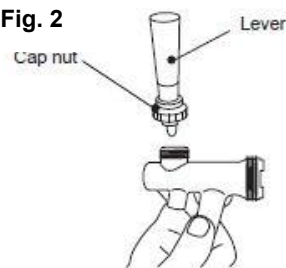


Fig. 3

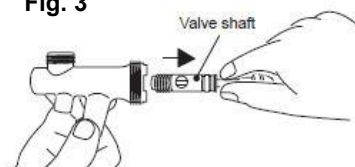


Fig. 4

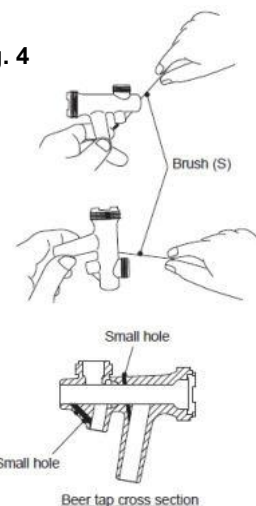


Fig. 5

